

BE

 
SERVICE

These helpful Hints address frequently asked questions. For detailed information see your Use and Care Guide or the Website noted in the Use and Care Guide.


- See "Normal Operating Sounds" on the website noted in your Use and Care Guide.
- Please read the entire Use and Care Guide to become aware of important safety instructions and to become familiar with your new refrigerator.
- Send your registration card to register your refrigerator.

WATER SUPPLY CONNECTIONS

- Connect water supply - check for water leaks
- Turn Ice Maker **OFF** if the water supply is not connected immediately

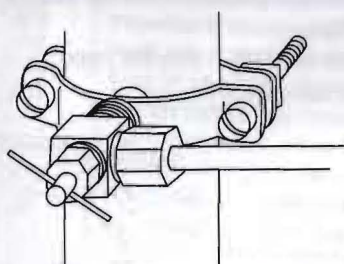

1/4 "saddle valve ONLY

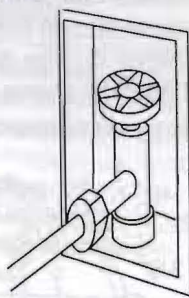 

shut off valve

TEMPERATURE TOO COLD / WARM

If the temperature is too cold or warm, adjust the control one setting at a time.

 
- When changing control settings wait 24 hours before making additional adjustments.

NOT PRODUCING ICE


- Make sure the water supply is connected and turned **ON**.
- Check to see if your ice maker is turned **ON**.



ON/OFF Switch

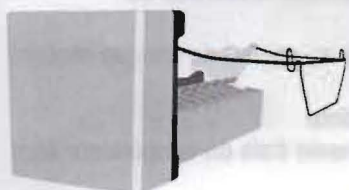

Ice Maker **OFF**

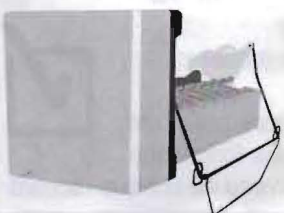 


Ice Maker **ON**


UNEVEN DOORS

Your refrigerator may have adjustable rollers (A) or leveling screws (B). To ensure the best door alignment make adjustment after food has been stored in the doors.

 1. Remove base grill.
2. Use hex driver or socket wrench to raise and lower each side of the refrigerator.

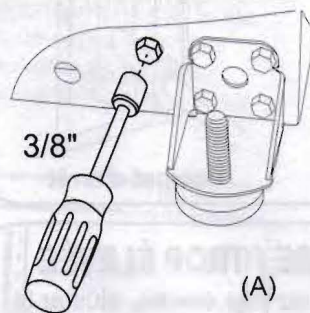

(A)

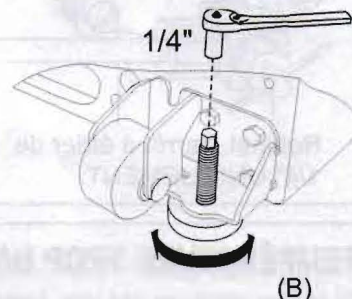 

(B)

INSTALLATION CHECK OFF LIST

Doors

- ☐ Handles are secure and tight
- ☐ Doors seal completely
- ☐ Doors are even across top
- ☐ Foot brake is secured down firmly to floor
- ☐ Base grille is properly attached to the refrigerator



Electrical Power

- ☐ House power is turned on
- ☐ Refrigerator is plugged into a grounded 3 prong outlet

Ice Maker (In some models)

- ☐ Household water supply connected to refrigerator
- ☐ Check for water leaks at all connections

Final Checks

- ☐ Shipping material removed
- ☐ Fresh food freezer controls are set
- ☐ Use and Care Guides saved
- ☐ Registration card is sent in
- ☐ Water filter is installed (In some models)
- ☐ Ice Maker is turned on

Recheck in 24 hours

- ☐ Ice and water dispenser is operating
- ☐ Check for water leaks at all connections

IF YOU ARE DISSATISFIED WITH THE INSTALLATION, PLEASE CALL THE STORE WHERE PURCHASED.

Para obtener acceso a "Antes de hablar a servicio" en español visite: www.whirlpool.com

W10257644

2/08

 
Top shelves are shipped upside-down.

Important information to know about glass shelves and covers:

Do not clean glass shelves or covers with warm water when they are cold. Shelves and covers may break if exposed to sudden temperature changes or impact, such as bumping. For your protection, tempered glass is designed to shatter into many small, pebble-size pieces. This is normal. Glass shelves and covers are heavy. Use special care when removing them to avoid impact from dropping.

Place shelves right side up by completing the following:

1. Hold shelf firmly in place by positioning hand underneath shelf.
2. Remove Packaging material from shelf area.
3. Remove shelf by lowering front and releasing hooks from metal track. Pull shelf forward.
4. Flip shelf over.
5. Replace shelf by lifting front of shelf slightly. Insert hooks into metal track and lower front.

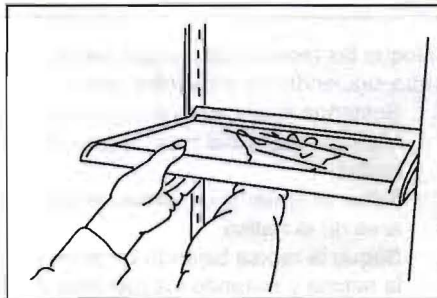


Le réfrigérateur est livré avec les tablettes supérieures à l'envers..

Importants renseignements à savoir au sujet des tablettes et des couvercles en verre :

Ne pas nettoyer les tablettes ou couvercles en verre avec de l'eau tiède quand ils sont froids. Les tablettes et les couvercles peuvent se briser s'ils sont exposés à des changements soudains de température ou à un impact tel que coup brusque. Pour votre protection, le verre trempé est conçu pour éclater en d'innombrables pièces minuscules. Ceci est normal. Les tablettes et les couvercles en verre sont lourds. Un soin spécial s'impose lors de leur déplacement pour éviter l'impact d'une chute.

Pour remettre les tablettes à l'endriot:

 1. Maintenir la tablette fermement en place en plaçant la main dessous pour la soutenir.
2. Enlever tout matériau d'emballage de la tablette et de sa proximité.
3. Enlever la tablette en abaissant l'avant de façon à décrocher les crochets de la crémaillère métallique. Tirer la tablette vers l'avant.
4. Retourner la tablette à l'endriot.
5. Remettre la tablette en place. Pour cela, soulever légèrement l'avant, insérer les crochets dans la crémaillère et abaisser l'avant.

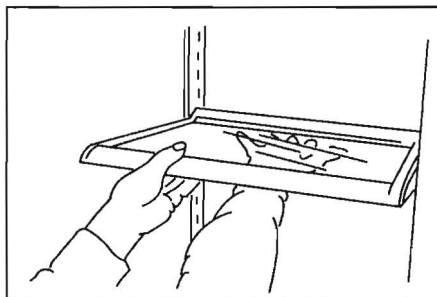

12044702 7/07